

6.2 Lists of spare parts

- |      |              |      |              |
|------|--------------|------|--------------|
| 1520 | Bearing      | 1554 | Sleeve       |
| 1521 | Locking ring | 1560 | Coupling     |
| 1524 | Locking ring | 1561 | Parallel key |

Figure 6-5 KQ, K8 and KQS adapters for servomotor

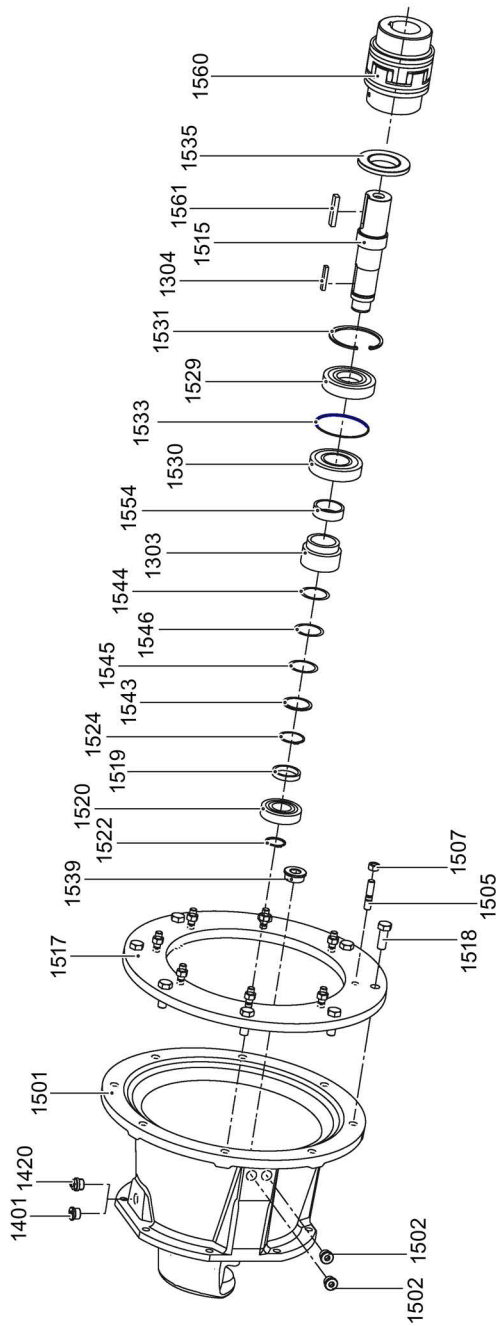


Figure 6-6 K8 sizes 818 - 822